

## Bending radius sensor cables

The minimal bending radius for the not shielded sensor cables at the Afag-program are specified as follows::

Static                      Inside radius = 5 x Cable diameter

Dynamic                    Inside radius = 10 x Cable diameter