



Adjustment sensor cable in C-nut

Push a piece heat shrink tube (approx. diameter 5mm) from the front over the sensor. The length of the heat shrink tube depends on the appropriate module length.

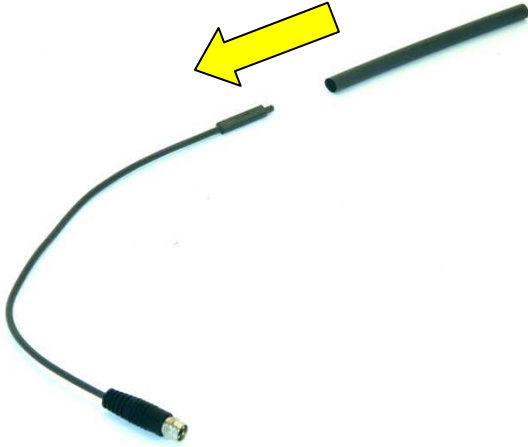

Warm up the heat shrink tube with a hot-air dryer until he fully lies on the sensor cable.

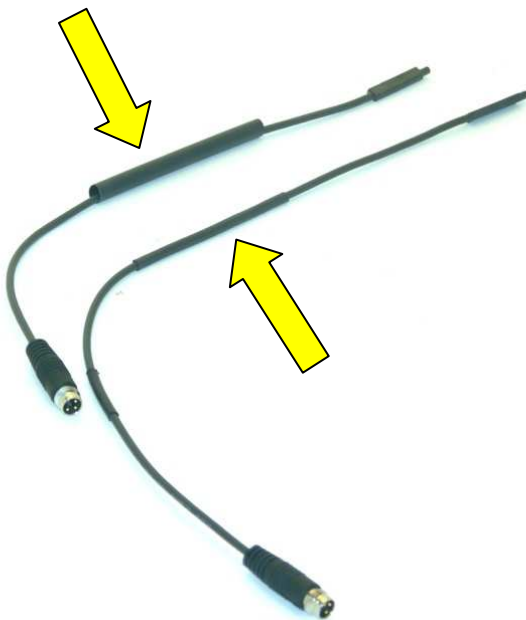

Mount the sensor in the C-nut.



Bring the sensor cable with the heat shrink tube into the C-nut.

