


# Assembly and operating instructions

# Electric slide ES-20 | ES-30

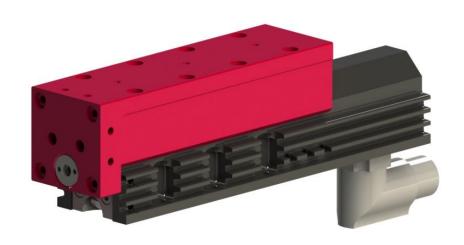

# **Translation of the Original Assembly Instructions EN**

■ ES30-050-SL ⇒ Order no.: 50425973

■ ES30-100-SL ⇒ Order no.: 50425974

■ ES30-200-SL ⇒ Order no.: 50425976



### Dear Customer,

Thank you for choosing our products and placing your trust and confidence in our company!

These assembly and operating instructions contain all essential information you need about your product. Our aim is to provide the required information as concisely and clearly as possible. If, however, you still have any questions on the contents or suggestions, please do not hesitate to contact us. We are always grateful for any feedback.

Our team will also be glad to answer any further question you may have regarding the electric slide or other options.

We wish you every success with our products!

With kind regards

Your Afag team

# © Subject to modifications

The electric slides have been designed by Afag Automation AG according to the state of the art. Due to the constant technical development and improvement of our products, we reserve the right to make technical changes at any time.

# Updates of our documentations



Unlike the printed documents, our digital instructions manuals, product data sheets and catalogues are being continuously updated on our website.

Please keep in mind that the digital documents on our website are always the latest versions.

# © Copyright 2021 Afag Automation AG

All contents of the present assembly and operating instructions, in particular the texts, photographs and graphics, are protected by copyright. All rights reserved. No part of these assembly and operating instructions may be reproduced, distributed (made available to third parties), or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of Afag Automation AG.

Afag Automation AG Luzernstrasse 32 CH-6144 Zell (Schweiz)

Tel.: +41 62 959 86 86 e-mail: sales@afag.com Internet: www.afag.com




# Table of contents

1	Genei	raı		6
	1.1	Со	ntents and purpose of these assembly instructions	6
	1.2		planation of symbols	
	1.3		ditional symbols	
	1.4	Ар	plicable documents	8
	1.5	Wa	arranty	8
	1.6	Lia	bility	8
2	Safety	y ins	structions	9
	2.1	Ge	neral	9
	2.2	Inte	ended use	9
	2.3	Fo	reseeable misuse	9
	2.4	Ob	ligations of the operator and the personnel	. 10
	2.	4.1		
	2.	4.2	Obligations of the operating company	. 10
	2.	4.3	Obligations of the personnel	. 11
	2.5	Pe	rsonnel requirements	. 11
	2.	5.1	Personnel qualification	. 11
	2.6	Pe	rsonal protective equipment (PPE)	. 12
	2.7	Ch	anges & modifications	. 12
	2.8	Ge	neral hazards / residual risks	. 13
	2.	8.1	General hazards at the workplace	. 13
	2.8.2		Danger due to electricity	. 14
	2.	8.3	Danger due to strong magnetic fields	. 14
	2.	8.4	Danger due to high temperatures	. 14
	2.	8.5	Mechanical hazards	. 14
3	Techr	nical	data	. 15
	3.1	Ele	ectric slide ES20	. 15
	3.	1.1	Dimension drawing ES20	. 15
	3.	1.2	Technical data ES20	. 16
	3.	1.3	Preferred combinations ES20	. 17
	3.	1.4	Module loads ES20	. 18
	3.	1.5	Motor overview ES20	
	3.2	Ele	ectric slide ES30	. 20
	3.	2.1	Dimensional drawing ES30	
	-	2.2	Technical data ES30	
	_	2.3	Preferred combinations ES30	
	_	2.4	Module loads ES30	
	3.	2.5	Motor overview ES30	. 23
4	Trans	port	t, packaging and storage	. 24
	4.1	Sa	fety instructions for transport	. 24



	4.2	Sco	ppe of supply	24
	4.3	nsport	25	
	4.4	Pac	ckaging	25
	4.5	Sto	rage	25
5	Struc	ture	and description	26
	5.1	Des	sign electric slides	26
	5.2	Pro	duct description	26
	5.3	Acc	cessories	27
	5.	.3.1	MagSpring	27
	5.	.3.2	Compensation spring	
	5.	.3.3	External position measuring system for ES20 and ES30	
	5.	.3.4	Servo controller	
	5.	.3.5	Controllers, cables, plugs	
	_		Transformers and power supplies	
	5.	.3.7	Program for supports - ES-Modules	52
6	Instal	llatio	n, assembly & setting	53
	6.1		ety Instructions for installation & assembly	
	6.2	Ass	sembly & attachment	54
	6.	.2.1	Mounting holes	
	6.	.2.2	Centering bushing	
	6.		Tightening torques	
			Mounting ES20 (slide)	
		.2.5	Mounting ES20 (basic element)	
		.2.6	Mounting ES30 (slide)	
	_	.2.7	Mounting ES30 (basic element)	
	_	.2.8	Rotatability of C motor connector (ES30)	
	6.3		gramming of the electric slides	
	_	.3.1	3	
	6.	.3.2	Programming	59
7	Comr	nissi	oning	60
	7.1	Saf	ety instructions for commissioning	60
	7.2	Pre	paratory activities for commissioning	61
	7.3	Cor	mmissioning of the modules	61
	7.4	Set	ting up & retrofitting	62
8	Fault	elim	ination	63
	8.1	Saf	ety instructions for troubleshooting	63
	8.2	Fau	ılt causes and remedy	63
9	Maint	enar	nce and repair	64
	9.1	Ger	neral notes	64
	9.2	Saf	ety instructions for maintenance and repair	64
	9.3	Mai	intenance activities and maintenance intervals	65





	9.	3.1 Overview of the maintenance points	65
	9.	3.2 Further maintenance	67
	9.4	Spare parts and repair work	67
10	Deco	mmissioning and disposal	68
	10.1	Safety instructions for decommissioning and disposal	68
	10.2	Decommissioning	68
	10.3	Disposal	68
11	Decla	ration of incorporation	69



# 1 General

# 1.1 Contents and purpose of these assembly instructions

These assembly instructions contain important information on assembly, commissioning, functioning and maintenance of the electric slide to ensure safe and efficient handling of the electric slide ES20 and ES30.

Consistent compliance with these assembly instructions will ensure:

- permanent operational reliability of the electric slide,
- optimal functioning of the electric slide,
- timely detection and elimination of defects (thereby reducing maintenance and repair costs),
- prolongation of the electric slide's service life.

The illustrations in this manual shall provide you with a basic understanding of the module and may vary from the actual design of your module.

# 1.2 Explanation of symbols

The safety notes are marked by a pictogram and a signal word. The safety notes describe the extent of the hazard.

# **DANGER**



# Danger!

This safety note indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

# **WARNING**



# Warning!

This safety note points out a potentially hazardous situation which, if not avoided, could result in death or serious injury.

# **CAUTION**



# Caution!

This safety note points out a potentially dangerous situation which, if not avoided, can result in minor or slight injuries.

# **NOTICE**

This safety note points out a potentially dangerous situation which, if not avoided, can cause substantial damage to property and the environment.



This note contains important additional information as well as useful tips for safe, efficient and trouble-free operation of the electric slide.



# Further warning signs:

Where applicable, the following standardised symbols are used in this manual to point out the various potential health risks.



Warning - Dangerous electrical voltage.



Warning - Risk of injury from contact with hot surfaces.



Warning - Risk of hand and finger injury due to uncontrolled movements of components.



Warning - Magnetic field.



Warning - Back injury due to heavy lifting.



Warning - Risk of injury as a result of parts being flung out!



Warning - High noise levels.

# 1.3 Additional symbols

In these assembly instructions the following symbols are used to highlight instructions, results, references, etc.

Symbol	Description
1.	Instructions (steps)
$\Rightarrow$	Results of actions
<b>•</b>	References to sections
	Enumerations not ordered



# 1.4 Applicable documents



Each electric slide is accompanied by a safety information sheet. This information sheet must be read carefully by every person who carries out work on and with the electric slides.

# 1.5 Warranty

The warranty terms for Afag handling components and handling systems are the following:

- 24 months from initial operation and up to a maximum of 27 months from delivery.
- Wear parts are excluded from the warranty (The customer is entitled to a product free of defects. This does also apply to defective accessories and wear parts. Normal wear and tear are excluded from the warranty).

The warranty covers the replacement or repair of defective Afag parts. Further claims are excluded.

# The warranty shall expire in the following cases:

- Improper use of the module
- Non-observance of the instructions regarding assembly, commissioning, operation and maintenance of the module.
- Improper assembly, commissioning, operation and maintenance
- Repairs and design changes carried out without prior technical instructions of Afag Automation AG
- Removing the serial number from the product
- Inadequate checking of wear parts
- Non-observance of the EC Machinery Directive, the Accident Prevention Regulations, the Standards of the German Electrotechnology Association (VDE) and these safety and assembly instructions.

### 1.6 Liability

No changes shall be made to the electric slides unless described in this instructions manual or approved in writing by Afag Automation AG.

Afag Automation AG accepts no liability for unauthorized changes or improper assembly, installation, commissioning, operation, maintenance or repair work.



# 2 Safety instructions

### 2.1 General

This chapter provides an overview of all important safety aspects to ensure safe and proper use of the electric slide and optimal protection of personnel.

Safe handling and trouble-free operation of the electric slides requires knowledge of the basic safety regulations.

Every person carrying out installation, commissioning, maintenance work or operating the ES modules must have read and understood the complete user manual, especially the chapter on safety instructions.

Also observe all rules and regulations regarding accident prevention applicable to the place of installation of the modules.

Improper use may result in danger to life and limb of the user or third parties or in damage to the automation system or other material assets.



Failure to follow the directions and safety instructions given in this instructions manual may result in serious hazards.

### 2.2 Intended use

The ES electric slides series is designed for the shock-free linear movement of permanently mounted loads in **non-explosive** environments and in the ambient and operating specially conditions defined for these modules.

The electric slides are used in automation systems.

The electric slides are exclusively intended for operation with original LinMot components (controller, cables ...).

Any use beyond the described purpose is considered to be not in accordance with the intended use.

The intended use of the module also includes:



- observance of all instructions given in this instructions manual,
- compliance with the inspection and maintenance work and the specifications in the data sheets,
- using only original spare parts.

# 2.3 Foreseeable misuse

Any use other than or beyond the intended use described above is considered a misuse/improper use of the electric slides.

# Especially the following use is considered a misuse:

Use in potentially explosive atmospheres



# **WARNING**

# Risk of injury if the module is not used as intended!



The improper use of the electric slides poses a potential hazard to the personnel.

- The electric slides may only be used in a technically perfect condition in accordance with their intended use and instructions in this manual as well as in compliance with the safety requirements!
- Any malfunctions, particularly those that could impair safety, must be eliminated immediately!



Risks can occur if the module is not used as intended. In the event of damages caused by improper use the following shall apply:

- the operating company shall be solely responsible for such damage, and
- AFAG does not accept any liability for damages caused by improper use.

# 2.4 Obligations of the operator and the personnel

# 2.4.1 Observe the assembly instructions

A basic prerequisite for safe and proper handling of the parallel gripper is a good knowledge of the basic safety instructions.



These assembly instructions, in particular the safety instructions contained therein, must be observed by all persons working with the electric slides.

# 2.4.2 Obligations of the operating company

In addition to the safety instructions given in this manual, the operating company must also comply with the safety, accident prevention and environmental protection regulations valid for the field of application of the electric slides.

The operating company is required to use only personnel who:

- have the necessary professional qualifications and experience,
- are familiar with the basic rules regarding occupational safety and accident prevention,
- have been instructed in the correct handling of the electric slides,
- have read and understood these assembly instructions.

# The operating company is also required to:

- monitor on an ongoing basis that the personnel work safely considering any potential hazard involved and the assembly instructions are observed,
- ensure that the assembly instructions are always kept at hand at the automation system in which the electric slides have been integrated,
- observe and communicate universally applicable laws and regulations regarding accident prevention and environmental protection,
- provide the necessary personal protective equipment (e.g. protective gloves) and instruct the personnel to wear it.



# 2.4.3 Obligations of the personnel

All personnel working with the electric slides are required to:

- read and observe these assembly instructions, especially the chapter on safety,
- observe the occupational safety and accident prevention regulations,
- observe all safety and warning signs on the electric slides,
- refrain from any activity that might compromise safety and health.



In addition, the personnel must wear the personal protective equipment required for carrying out their work. (Chapter 2.6).

# 2.5 Personnel requirements

# 2.5.1 Personnel qualification

The activities described in the assembly instructions require specific requisites at the level of professional qualifications of the personnel.

Personnel not having the required qualification will not be able to assess the risks that may arise from the use of the electric slides thus exposing himself and others to the risk of serious injury. Therefore, only qualified personnel may be permitted to carry out the described activities on the electric slides.

Persons whose ability to react is restricted due to the intake of medication or the like must not interact with the electric slides.

These installation instructions are intended for skilled personnel (installers, system integrators, maintenance personnel, technicians), electricians and operating personnel.

The following is a description of the professional skills (qualifications) required for carrying out the different activities:

# Qualified personnel:

Qualified personnel with appropriate training who are qualified due to their special know-how and fully familiar with the machine and who have been given instructions on how to carry out the task entrusted to them safely.

# Qualified electrician:

Persons who have obtained their electrical qualifications through appropriate professional training and complementary courses that enables them to identify risks and prevent possible hazards resulting from electricity.

### **Operator (trained personnel):**

Authorized persons who due to their specialized professional training, expertise and experience are capable of identifying risks and preventing possible hazards arising from the use of the machine.



# 2.6 Personal protective equipment (PPE)

The personal protective equipment serves to protect the personnel from hazards affecting their safety and health at work.

When working on/with the electric slides, the personnel must wear the personal protective equipment assigned by the safety officer of the operating company or as required by safety regulations. In addition, the personnel are required to:

- wear the personal protective equipment provided by the operating company (employer),
- check the personal protective equipment for proper condition, and
- immediately notify the person responsible on site of any defects found on the personal protective equipment.

Personal protective equipment and the respective mandatory signs:



*Protective clothing* is a close-fitting clothing specifically designed to protect personnel from hazards during work.



Protective gloves are specifically designed to protect the personnel against hand injuries (such as cuts, abrasion, burns).



Safety shoes are specifically designed to protect the personnel against foot injuries from crushing, falling objects or slipping on slippery surfaces.



Hearing protectors are required to protect the personnel against excessive noise levels to prevent noise-induced hearing loss.

# 2.7 Changes & modifications

No changes may be made to the electric slides which have not been described in these assembly instructions or approved in writing by Afag Automation AG.

AFAG Automation AG accepts no liability for unauthorised changes or improper assembly, installation, commissioning, maintenance or repair work.



The electric slides may not be changed or modified in any way, except with the prior written consent of AFAG Automation AG.



### 2.8 General hazards / residual risks

Despite the safe design of the electric slides and the technical protective measures taken, there still remain residual risks that cannot be avoided and which present a non-obvious residual risk when operating the electric slides.

Observe the safety instructions in this chapter and in the other sections of this manual to avoid damage to property and dangerous situations for the personnel.

# 2.8.1 General hazards at the workplace

The electric slides have been built according to the state-of-the-art and the applicable health and safety requirements. Nevertheless, improper use of the electric slides may cause the following hazards to the personnel:

- danger to life and limb of the operator or third parties,
- on the electric slides themselves,
- property damage.



Always keep the assembly instructions ready at hand at the workplace! Please, also observe:

- the general and local regulations on accident prevention and environmental protection.
- Observe the safety information sheet for the electric slide.

# **WARNING**



# Danger - Do not use in unsuitable environment!

The electric slides are designed for use in **non-**explosive atmospheres.

• Do **not** use the electric slides in potentially explosive atmospheres!

# **CAUTION**



# Risk of injuries due to uncontrolled parts movements!

When connecting the electric slides to the control unit or when operating the electric slides sudden, unexpected movements may occur which can cause personal injury or property damage.

- Only qualified personnel may work with or on the electric slides.
- Read the assembly instructions carefully before carrying out any work on or with the electric slides.



# 2.8.2 Danger due to electricity

# **WARNING**

# Danger! Risk of electric shock!



If work on electrical components is required, ensure that the work is carried out properly, failure to do so will cause serious or fatal injuries.

Work on the machine's electrical equipment may only be performed by skilled electrician or trained personnel under the supervision of a skilled electrician in accordance with all relevant electrical regulations.

# 2.8.3 Danger due to strong magnetic fields

# **DANGER**



# Danger due to magnetic fields!

Due to the strong magnetic fields, electronic devices such as pacemakers can be disturbed or their function impaired.

Persons with a pacemaker must keep a safety distance of at least 50 cm.

### 2.8.4 Danger due to high temperatures

# **CAUTION**



# Danger of injury from hot surfaces!

During continuous operation of the electric slide, the surface of the slide heats up.

Before touching hot surfaces without protective gloves, make sure they have cooled down to ambient temperature.

# 2.8.5 Mechanical hazards

# CAUTION



# Danger of injury from moving components!

Limbs can be crushed by moving components!

- Work on and with the electric slides may only be carried out by qualified personnel.
- Never reach into the system during normal operation!



# 3 Technical data

# 3.1 Electric slide ES20

# 3.1.1 Dimension drawing ES20

Туре	ES20-50-SL	ES20-100-SL	ES20-200	ES20-300
A	2 x 30 mm	4 x 30 mm	4 x 30 mm	4 x 30 mm
В	135 mm	185 mm	343 mm	443 mm
С	194 mm	287.5 mm	367.5 mm	497.5 mm
D	3 x 30 mm	5 x 30 mm	10 x 30 mm	13 x 30 mm

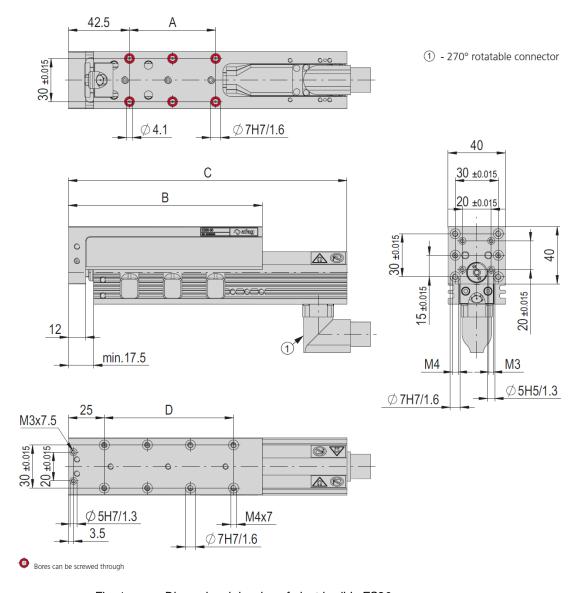


Fig. 1 Dimensional drawing of electric slide ES20



### 3.1.2 Technical data ES20

ES20					
Attachment grid			30 x 30 mm		
Attachment thread			M4		
Attachment thread alternative			M3		
Operating temperature			0 - 50 °C		
Storage temperature			0 - 50 °C		
Humidity			< 90 %		
Туре	ES20-50-SL	ES20-100-SL	ES20-200	ES20-300	
Order number	50425969	50425970	50425971	50425972	
Stroke H	50 mm	100 mm	200 mm	300 mm	
Net weight	1.1 kg	1.5 kg	2.1 kg	2.5 kg	
Moving weight	0.5 kg	0.7 kg	1.1 kg	1.4 kg	
Nominal voltage	72 VDC	72 VDC	72 VDC	72 VDC	
Drive		Linear motor, electric			
Protection type	IP 30	IP 30	IP 30	IP 30	
Max. speed v	6.8 m/s	4.8 m/s	4.8 m/s	4.8 m/s	
Peak force Fx	67 N	137 N	137 N	137 N	
Constant force Fx	15 N	31 N	31 N	31 N	
Force constant	9 N/A	12.5 N/A	12.5 N/A	12.5 N/A	
Repeat accuracy	+/- 0.05 mm	+/- 0.05 mm	+/- 0.05 mm	+/- 0.05 mm	
- with external position measuring system	+/- 0.02 mm	+/- 0.02 mm	+/- 0.02 mm	+/- 0.02 mm	
Mounting position	+	+	+	+	
Note: Note: For vertical installation, a weight componention via MacErring of	2 03 0523) paints softessortment	This required. This one	populate the load m	or for undically instal	

Note: Note: For vertical installation, a weight compensation via MagSpring or compensation spring (ES20-50-SL) is required. This compensates the load mass for vertically installed axes. Furthermore, the peripherals and the workplace are also prevented from falling when the electric slide is in a deenergised state.

Cleanroom class ISO 14644-1, class ISO 7

# Inlcuded in the delivery

- (Catalogue HT accessories) 2x Centering bushing Ø7x3
- 4x Mounting screw M4x12
   4x Spring ring M4

### Accessories


- MagSpring side/front[p. 192-196]
- Compensation spring ES20-50-SL[p. 203]
   February 1997
- External position measuring system ES20[p. 204] (Catalogue HT accessories)
- Centering bushing Ø5x2.5
- Motor cable-M16
- Controller C1xxx-1S
- Plug kit for C1xxx-1S
- USB-RS232 Converter for controllers
- Power supply S01-72/500, 1-phase
- MTZ 25x2b Double centric mounting module

### Alternative accessories

- (Catalogue HT accessories)
- Additional motor cables
- Additional controllers
- Additional power supplies Additional mounting modules



# 3.1.3 Preferred combinations ES20

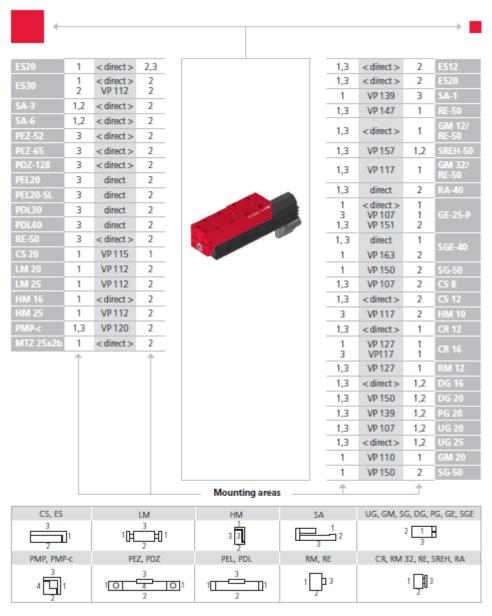

Note that there might be different mounting positions from one module to another one.

The required connection elements and the range of support columns are depicted in the catalogue HT accessories.



# 3.1.4 Module loads ES20

Туре	ES20-50-SL	ES20-100-SL	ES20-200	ES20-300
Max. dynamic torque Mx	5 Nm	5 Nm	5 Nm	5 Nm
Max. dynamic torque My	25 Nm	25 Nm	50 Nm	50 Nm
Max. dynamic torque Mz	25 Nm	25 Nm	50 Nm	50 Nm
Peak force Fx	67 N	137 N	137 N	137 N



Maximum payload/type	ES20-50-SL	ES20-100-SL	ES20-200	ES20-300
Installation position (horizontal) for mounting side 1/3	4 kg	4 kg	3 kg	2 kg
Installation position (vertical) for mounting side 1/3	4 kg	4 kg	3 kg	2 kg

Assembly sides module mounting

horizontal:




vertical:




### Diagrams

# Deflection ES20 Deflection [mm] 1 0.8 0.6 0.4 0.2 0 0 10 20 30 40 50 Hub Torque [Nm]

# Deflection ES20-SL

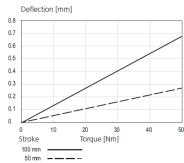

# Operation time ES20

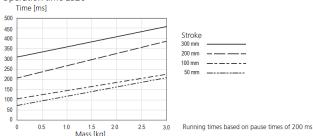



# 3.1.5 Motor overview ES20

Module	Stator	Stator Order no.	Rotor	Rotor Order no.	Wiper	Wiper Order no.
ES20-050	PS01-23x80F-HP-R	50429980	PL01-12x170/130-HP	50429981	Wiper seal PAW01-12	50429988
ES20-100	PS01-23x160H-HP-R	50430155	PL01-12x270/230-HP	50430156	Wiper seal PAW01-12	50429988
ES20-200	PS01-23x160H-HP-R	50430155	PL01-12x350/310-HP	50430297	Wiper seal PAW01-12	50429988
ES20-300	PS01-23x160H-HP-R	50430155	PL01-12x480/440-HP	50430300	Wiper seal PAW01-12	50429988



# 3.2 Electric slide ES30

# 3.2.1 Dimensional drawing ES30

Type	ES30-50-SL	ES30-100-SL	ES30-100	ES30-200-SL	ES30-200	ES30-300	ES30-400	ES30-500
Α	3 x 48 mm	3 x 48 mm	3 x 48 mm	3 x 48 mm	3 x 48 mm	3 x 48 mm	3 x 48 mm	3 x 48 mm
В	164 mm	214 mm	326 mm	314 mm	426 mm	526 mm	626 mm	726 mm
C	290.5 mm	330.5 mm	330.5 mm	430.5 mm	430.5 mm	530.5 mm	630.5 mm	730.5 mm
D	1 x 48 mm	2 x 48 mm	4 x 48 mm	4 x 48 mm	6 x 48 mm	8 x 48 mm	10 x 48 mm	12 x 48 mm
015	45.5	A	•	<b>O</b> 0		1	- 270° rotata	ble connecto
48 ±0.0015		Ø 6.3		Ø 9H7/2.1		40	60	
	15 min. 20.	0 0000	C		02	48 ±0.015 6	±0.015 ±0.015 M3 W4 W4 Ø 7H	
_	35 48 ± 4 ± 0.015	- · · · · · · · · · · · · · · · · · · ·	M6	0]		LK	< Ø 58 <u></u>	

Fig. 2 Dimensional drawing of electric slide ES30



# 3.2.2 Technical data ES30

ES30	
Attachment grid	48 x 48 mm
Attachment thread	M6
Operating temperature	0 - 50 °C
Storage temperature	0 - 50 °C
Humidity	< 90 %

Туре	ES30- 50-SL	ES30- 100-SL	ES30- 100	ES30- 200-SL	ES30-200	ES30-300	ES30-400	ES30-500
Order number	50425973	50425974	50425975	50425976	50425977	50425978	50425979	50425980
Stroke H	50 mm	100 mm	100 mm	200 mm	200 mm	300 mm	400 mm	500 mm
Net weight	3.1 kg	3.5 kg	4.1 kg	4.3 kg	4.9 kg	5.7 kg	6.5 kg	7.2 kg
Moving weight	1.3 kg	1.6 kg	1.85 kg	2.2 kg	2.6 kg	3.2 kg	3.8 kg	4.4 kg
Nominal voltage	72 VDC	72 VDC	72 VDC	72 VDC	72 VDC	72 VDC	72 VDC	72 VDC
Drive				Linear mo	tor, electric			
Protection type	IP 30	IP 30	IP 30	IP 30	IP 30	IP 30	IP 30	IP 30
Max. speed v	3.2 m/s	3.2 m/s	3.2 m/s	3.2 m/s	3.2 m/s	3.2 m/s	3.2 m/s	3.2 m/s
Peak force Fx	255 N	255 N	255 N	255 N	255 N	255 N	255 N	255 N
Constant force F	< 51 N	51 N	51 N	51 N	51 N	51 N	51 N	51 N
Force constant	17 N/A	17 N/A	17 N/A	17 N/A	17 N/A	17 N/A	17 N/A	17 N/A
Repeat accuracy	+/- 0.05 mm	+/- 0.05 mm	+/- 0.05 mm	+/- 0.05 mm	+/- 0.05 mm	+/- 0.05 mm	+/- 0.05 mm	+/- 0.05 mm
- with external position measu- ring system	+/- 0.02 mm	+/- 0.02 mm	+/- 0.02 mm	+/- 0.02 mm	+/- 0.02 mm	+/- 0.02 mm	+/- 0.02 mm	+/- 0.02 mm
Mounting position	*	*	*	-\$-	<b>*</b>	<b>*</b>	*	<b>*</b>

Note: For vertical installation, a weight compensation via MagSpring or pneumatic weight balancing is required. If the weight compensation is not carried out, the slide will fall below when in a deenergised state. Furthermore, the operation time from the operation time diagram cannot be achieved.

Cleanroom class ISO 14644-1, class ISO 7

# Inlcuded in the delivery

(Catalogue HT accessories)

- 2x Centering bushing Ø9x4
- 4x Mounting screw M6x20

### Accessories

- MagSpring side/front [p. 198-202]
- External position measuring system ES30 [p. 204] (Catalogue HT accessories)
- Motor cable-M23
- Controller C1xxx-1S
- Plug kit for C1xxx-1S
- USB-RS232 Converter for controllers
- Power supply S01-72/1000, 3-phase
- MTZ 45x2b Double centric mounting module


# Alternative accessories

(Catalogue HT accessories)

- Additional motor cables
- Additional motor cash
   Additional controllers
- Additional power supplies
- Additional mounting modules



# 3.2.3 Preferred combinations ES30

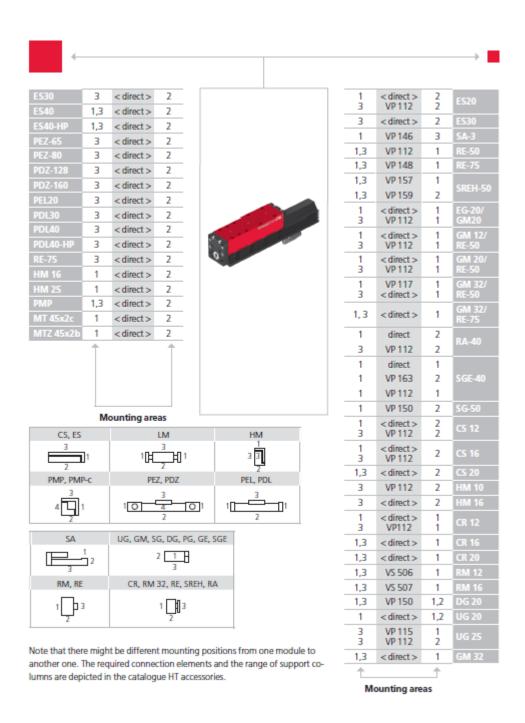



# 3.2.4 Module loads ES30

Туре	ES30- 50-SL	ES30- 100-SL	ES30-100	ES30- 200-SL	ES30-200	ES30-300	ES30-400	ES30-500
Max. dynamic torque Mx	30 Nm	30 Nm	30 Nm	30 Nm	30 Nm	30 Nm	30 Nm	30 Nm
Max. dynamic torque My	40 Nm	40 Nm	80 Nm	40 Nm	80 Nm	80 Nm	80 Nm	80 Nm
Max. dynamic torque Mz	40 Nm	40 Nm	80 Nm	40 Nm	80 Nm	80 Nm	80 Nm	80 Nm
Peak force Fx	255 N	255 N	255 N	255 N	255 N	255 N	255 N	255 N



Maximum payload/type	ES30- 50-SL	ES30- 100-SL	ES30-100	ES30- 200-SL	ES30-200	ES30-300	ES30-400	ES30-500
Installation position (horizontal) for mounting side 1/3	10 kg	10 kg	10 kg	8 kg	8 kg	6 kg	5 kg	4 kg
Installation position (vertical) for mounting side 1/3	10 kg	10 kg	10 kg	8 kg	8 kg	6 kg	5 kg	4 kg



# 3.2.5 Motor overview ES30

Module		Stator Order no.	Rotor	Rotor Order no.		Wiper Order no.
ES30-050-SL	PS01-37x120F-HP-C	50431216	PL01-20x240/180-HP	50431217	Wiper seal PAW01-20	50431223
ES30-100-SL	PS01-37x120F-HP-C	50431216	PL01-20x300/240-HP	50431218	Wiper seal PAW01-20	50431223
ES30-100	PS01-37x120F-HP-C	50431216	PL01-20x300/240-HP	50431218	Wiper seal PAW01-20	50431223
ES30-200-SL	PS01-37x120F-HP-C	50431216	PL01-20x400/340-HP	50431219	Wiper seal PAW01-20	50431223
ES30-200	PS01-37x120F-HP-C	50431216	PL01-20x400/340-HP	50431219	Wiper seal PAW01-20	50431223
ES30-300	PS01-37x120F-HP-C	50431216	PL01-20x500/440-HP	50431220	Wiper seal PAW01-20	50431223
ES30-400	PS01-37x120F-HP-C	50431216	PL01-20x600/540-HP	50431221	Wiper seal PAW01-20	50431223
ES30-500	PS01-37x120F-HP-C	50431216	PL01-20x700/640-HP	50431222	Wiper seal PAW01-20	50431223



# 4 Transport, packaging and storage

# 4.1 Safety instructions for transport

# **CAUTION**



# Risk of injury when packing and unpacking the electric slides!

The electric slides can be moved back and forth while they are still loose and cause crushing injuries.

• Pack and unpack the electric slides carefully.



Also observe the safety instructions in  $\bigcirc$  chap. 2 "Safety instructions" in this manual.

# 4.2 Scope of supply



In addition to the assembly and operating instructions, a safety information sheet is enclosed with each electric slide.

This information sheet must be read by every person who carries out work with and on the electric slides!

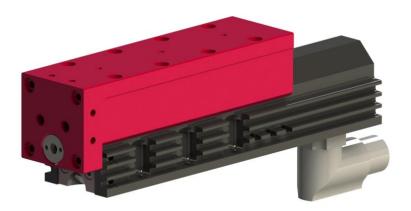


Fig. 3 Scope of delivery electric slide ES20 and ES30

Unt.	ES20	ES30
1 x	Module ES20	Module ES30
2 x	Centering sleeves ø 7x3	Centering bushing ø 9x4
2 x	Mounting screws M4x14	Mounting screws M6x20
1 x	Mounting/operating instructions	Mounting/operating instructions



# 4.3 Transport



No liability can be assumed for damages caused by improper installation on the part of the operating company.



The following conditions must be complied with for transport and storage:

- Storage temperature: 0-50 °C
- Relative air humidity: < 90%, non condensing

# 4.4 Packaging

The electric slides are transported in the transport packaging of AFAG Automation AG. If no AFAG packaging used, the electric slides must be packed so that they are protected against shock and dust.

# NOTICE

# Risk to the environment due to incorrect disposal of the packaging material

Environmental damage can be caused by incorrect disposal of the packaging material.

 Dispose of the packaging material in an environmentally sensitive way in accordance with the local environmental regulations.

# 4.5 Storage

If the electric slides are stored for an extended period of time, observe the following:

- Store the electric slides in the transport packaging
- Do not store the electric slides outdoors or expose them to weather conditions.
- The storage space must be dry and dust free.
- Room temperature of the storage space: 0-50 °C.
- Relative air humidity: < 90% non condensing.</li>
- Clean the electric slides and protect the blank metal parts against corrosion using the appropriate means.
- Protect the electric slides from dirt and dust.



# 5 Structure and description

# 5.1 Design electric slides

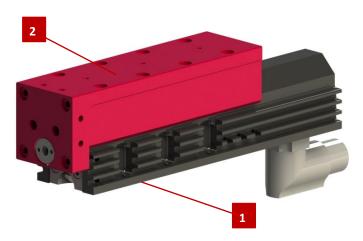


Fig. 4 Design of the electric slide (example ES20)

- 1. Base element
- 2. Slide

# 5.2 Product description

The electric slides are designed according to the state of the art and the recognised safety regulations. These modules are used in automation systems and serve exclusively to move workpieces.

The electric slides are designed for use in **non** explosive atmospheres.

The electric slides are intended exclusively for operation with original LinMot components (controller, cables, etc.). Any use beyond this is considered improper.

The electric slides are available in the following versions:

Module	Stroke	Number of guide units	Order no.
ES20-050-SL	50 mm	1	50425969
ES20-100-SL	100 mm	1	50425970
ES20-200	200 mm	2	50425971
ES20-300	300 mm	2	50425972
ES30-050-SL	50 mm	1	50425973
ES30-100-SL	100 mm	1	50425974
ES30-100	100 mm	2	50425975
ES30-200-SL	200 mm	1	50425976
ES30-200	200 mm	2	50425977
ES30-300	300 mm	2	50425978
ES30-400	400 mm	2	50425979
ES30-500	500 mm	2	50425980



### 5.3 Accessories

# 5.3.1 MagSpring


The MagSpring is a passive component with a constant force over a certain stroke range based on permanent magnets.

As a result, the load mass is compensated for vertically installed axes (counterbalance in vertical mounting position). The dropping of the periphery or the workpiece is prevented, when the electric slide is de-energized.

The MagSpring is offered with a holder, suitable for the electric slides ES20 and ES30. This can be mounted laterally, left, right, or in front of the axle.



Fig. 5 Overview of MagSpring

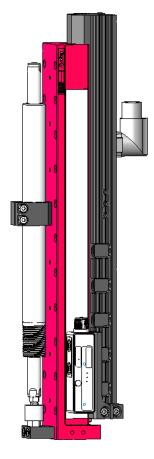

### Function:

The mode of operation is based on the attraction force of permanent magnets. Correspondingly, no power supply (electricity, compressed air, etc.) is necessary so that safety relevant applications are also possible.

Due to the special design of the flux-carrying components, as well as of the magnets, the highly non linear relationships between force and displacement of magnet arrangements are converted into a constant force profile.

Depending on the strength class of the MagSpring the permanent magnets are located either in the stator, in the rotor or in both components.

The rotor is supported by an integrated sliding guide so that the MagSpring can be used in a similar manner to gas pressured springs.

In case of vertical installation, linear motors and other direct drives must constantly apply a constant force in order to counteract the weight force. With a MagSpring installed parallel to the linear motor, the weight force can be passively compensated. The linear motor is used only for the actual positioning operation or the application of the dynamic forces and can be correspondingly be reduced.

# Mounting positions for the MagSpring:

The thread on the stator and the end of the rotor with four flats are facing downwards.

In the normal installation position, dimension SP=35 adjusted by clamping the MagSpring stator with fully retracted slide. This measure (SP=35) is the same for all MagSprings.



# **MagSpring lateral attachment**

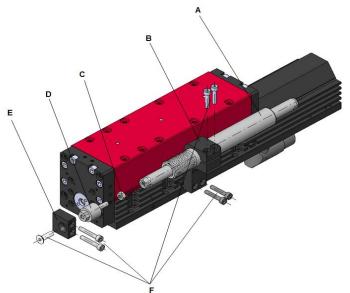


Fig. 6 MagSpring lateral attachment

The MagSpring for the lateral attachment is supplied as a set and consists the following components:

A MagSpring Stator and rotor D Compensating element

B Bracket E Adapter

C Hexagon nut F Mounting parts

# **MagSpring front attachment**

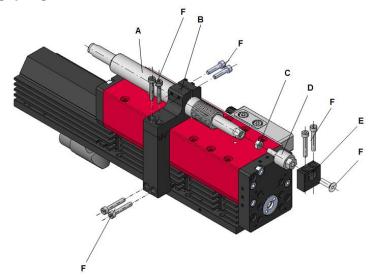


Fig. 7 MagSpring front attachment

The MagSpring for the front attachment is supplied as a set and consists the following components:

A MagSpring Stator and rotor D Compensating element

B Bracket E Adapter

C Hexagon nut F Mounting parts



# Overview MagSpring ES20


de	ES20	xxxxxxx	xxxxxxx	ххх	xxxxx	xxxxxxx	х	х
Electro slide	ES20-50-SL ES20-100-SL ES20-200 ES20-300	50425969 50425970 50425971 50425972	Compensation spring 50427546	MagSpring side (s)	MagSpring front (v)	External position measuring system	Position MagSpring	Position external position measuring system
Compensa- tion spring	Compensation spring ES20	9-50-SL	11 20				Position	n measur
ე :≚	Without compensation spr	ing	X					sitic
	MagSpring ES20 s/v 11N			50427548	50427554			8
g fo	MagSpring ES20 s/v 17N			50427549	50427555			rna
MagSpring for ES20-50	MagSpring ES20 s/v 22N			50427550	50427556			PXTE
gSp ES2	MagSpring ES20 s/v 40N			50427551	50427557			0
Mag	MagSpring ES20 s/v 50N			50427552	50427558			Ositi
	MagSpring ES20 s/v 60N			50427553	50427559			۵
	MagSpring ES20 s/v 11N			50427561	50427567			
for	MagSpring ES20 s/v 17N			50427562	50427568			
MagSpring for ES20-100	MagSpring ES20 s/v 22N			50427563	50427569			
Spr 520	MagSpring ES20 s/v 40N			50427564	50427570			
lag E	MagSpring ES20 s/v 50N			50427565	50427571			
2	MagSpring ES20 s/v 60N			50427566	50427572			
	MagSpring ES20 s/v 11N			50427574	50427580			
for	MagSpring ES20 s/v 17N			50427575	50427581			
MagSpring for ES20-200	MagSpring ES20 s/v 22N			50427576	50427582			
Spri 20-	MagSpring ES20 s/v 40N			50427577	50427583			
lag! ES	MagSpring ES20 s/v 50N			50427578	50427584			
Σ	MagSpring ES20 s/v 60N			50427579	50427585			
	MagSpring ES20 s/v 11N			50427587	50427593			
	MagSpring ES20 s/v 17N			50427588	50427594			
y fo	MagSpring ES20 s/v 22N			50427589	50427595			
MagSpring for ES20-300	MagSpring ES20 s/v 40N							
35p 52(				50427590	50427596			
Мас	MagSpring ES20 s/v 50N			50427591	50427597			
	MagSpring ES20 s/v 60N			50427592	50427598			
	Without MagSpring	FC20 /	250		Х			
posi- uring n	External position measuring	•				50427547		
— SE =	External position measuring					50427560		
rna mea yst	External position measuring					50427573		
Externa tion mea syst	External position measuring	,				50427586		
<u> </u>	Without external position r	neasuring syste	em			Х		
Mounting	Position MagSpring  Position external position n	neasuring syste		P		S	P O S	
2				P	S			P S





# Technical data MagSpring ES20 11N-22N


MagSpring side	ES20- 50-SL	ES20- 100-SL	ES20-200	ES20-300
Α	165 mm	245 mm	325 mm	405 mm
В	130 mm	210 mm	290 mm	370 mm

MagSpring front			ES20-200	ES20-300
	165 mm	245 mm	325 mm	405 mm
	130 mm	210 mm	290 mm	370 mm

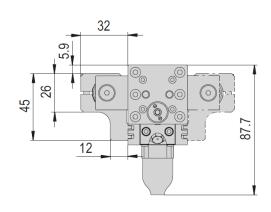

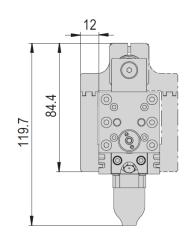

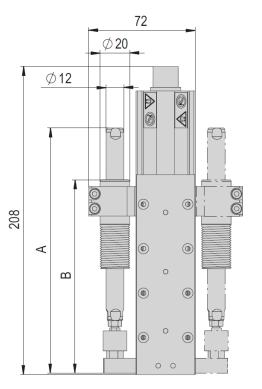

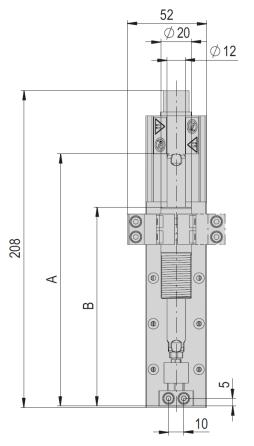



MagSpring ES20-50-SL		side					
Order number	50427548	50427549	50427550	50427554	50427555	50427556	
Stroke H	50 mm						
Net weight	0.235 kg	0.235 kg	0.235 kg	0.265 kg	0.265 kg	0.265 kg	
			22 N			22 N	

MagSpring ES20-100-SL						
Order number	50427561	50427562	50427563	50427567	50427568	50427569
Stroke H	100 mm					
Net weight	0.42 kg	0.42 kg	0.42 kg	0.45 kg	0.45 kg	0.45 kg
Permanent force	11 N	17 N	22 N	11 N	17 N	22 N

MagSpring ES20-200		side			front		
Order number	50427574	50427575	50427576	50427580	50427581	50427582	
Stroke H	200 mm						
Net weight	0.59 kg	0.59 kg	0.59 kg	0.62 kg	0.62 kg	0.62 kg	
Permanent force	11 N	17 N	22 N	11 N	17 N	22 N	


MagSpring ES20-300						
Order number	50427587	50427588	50427589	50427593	50427594	50427595
Stroke H	290 mm					
Net weight	0.753 kg	0.753 kg	0.753 kg	0.783 kg	0.783 kg	0.783 kg
Permanent force	11 N	17 N	22 N	11 N	17 N	22 N




# Technical data MagSpring ES20 40N-60N

MagSpring side	ES20- 50-SL		ES20-200	ES20-300
А	165 mm	245 mm	325 mm	405 mm
В	150 mm	210 mm	300 mm	375 mm

MagSpring front	ES20- 50-SL		ES20-200	ES20-300
	165 mm	245 mm	325 mm	405 mm
	150 mm	225 mm	300 mm	375 mm

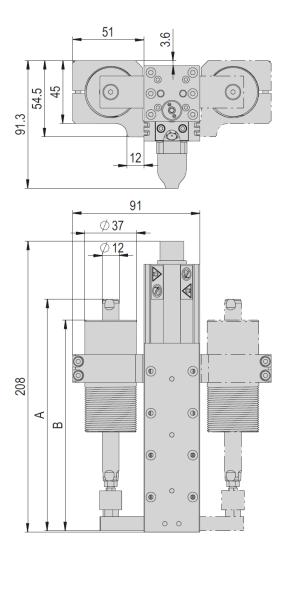

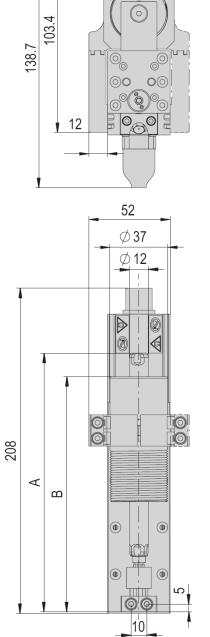



MagSpring ES20-50-SL	side					
Order number	50427551	50427552	50427553	50427557	50427558	50427559
Stroke H	50 mm					
Net weight	0.632 kg	0.632 kg	0.632 kg	0.662 kg	0.662 kg	0.662 kg
Permanent force	40 N	50 N	60 N	40 N	50 N	60 N

MagSpring ES20-100-SL						
Order number	50427564	50427565	50427566	50427570	50427571	50427572
Stroke H	100 mm					
Net weight	1.152 kg	1.152 kg	1.152 kg	1.182 kg	1.182 kg	1.182 kg
Permanent force	40 N	50 N	60 N	40 N	50 N	60 N

MagSpring ES20-200		side				
Order number	50427577	50427578	50427579	50427583	50427584	50427585
Stroke H	200 mm					
Net weight	1.657 kg	1.657 kg	1.657 kg	1.687 kg	1.687 kg	1.687 kg

MagSpring ES20-300						
Order number	50427590	50427591	50427592	50427596	50427597	50427598
Stroke H	275 mm					
Net weight	2.197 kg	2.197 kg	2.197 kg	2.227 kg	2.227 kg	2.227 kg
Permanent force	40 N	50 N	60 N	40 N	50 N	60 N



# **Overview MagSpring ES30**

	ES30	xxxxxxx	xx	xxxxxx	xxxxxxx	X	x
	ES30-50-SL	50425973	MagSpring	MagSpring	External position		Ε
٥	ES30-100-SL	50425974	side (s)	front (v)	measuring system	Position MagSpring	Position external position measuring system
Electro slide	ES30-100	50425975				agS	g s)
tr	ES30-200-SL	50425976				Σ	uri
leci	ES30-200	50425977				itior	eası
- W	ES30-300	50425978				Posi	E
	ES30-400	50425979					itio
	ES30-500	50425980					000
	MagSpring ES30 s/v 11N		50429205	50429211			ına
MagSpring for ES30-50	MagSpring ES30 s/v 17N		50429206	50429212			xter
gSpring ES30-50	MagSpring ES30 s/v 22N		50429207	50429213			l e
Spr S30	MagSpring ES30 s/v 40N		50429208	50429214			sitio
/ag E	MagSpring ES30 s/v 50N		50429209	50429215			Po
2	MagSpring ES30 s/v 60N		50429210	50429216			
<u>.</u>	MagSpring ES30 s/v 11N		50429218	50429224			
of 0	MagSpring ES30 s/v 17N		50429219	50429225			
ing -10	MagSpring ES30 s/v 22N		50429220	50429226			
MagSpring for ES30-100	MagSpring ES30 s/v 40N		50429221	50429227			
lag E	MagSpring ES30 s/v 50N		50429222	50429228			
2	MagSpring ES30 s/v 60N		50429223	50429229			
_	MagSpring ES30 s/v 11N		50429231	50429237			
MagSpring for ES30-200	MagSpring ES30 s/v 17N		50429232	50429238			
ing -20	MagSpring ES30 s/v 22N		50429233	50429239			
gSpring TES 30-200	MagSpring ES30 s/v 40N		50429234	50429240			
/ag E	MagSpring ES30 s/v 50N		50429235	50429241			
2	MagSpring ES30 s/v 60N		50429236	50429242			
	MagSpring ES30 s/v 11N		50429244	50429250			
or	MagSpring ES30 s/v 17N		50429245	50429251			
MagSpring for ES30-300	MagSpring ES30 s/v 22N		50429246	50429252			
gSpring ES30-300	MagSpring ES30 s/v 40N		50429247	50429253			
agS ES:	MagSpring ES30 s/v 50N		50429248	50429254			
Ĕ	MagSpring ES30 s/v 60N		50429249	50429255			
	Without MagSpring			>	(		
c =	External position measuring	g system ES30 05	50mm		50429204		
position g system	External position measuring	g system ES30 10	00mm		50429217		
iosi	External position measuring	g system ES30 20	00mm		50429230		
- č	External position measuring	g system ES30 30	00mm		50429243		
Externa neasurii	External position measuring	•			50429256		
Ext	External position measuring				50429257		
-	Without external position n	neasuring systen	n		X		
Mounting	Position MagSpring				P	P O S	
Mou	Position external position m	neasuring system	1	_			
		NEW TEN	1 NO		s		P S




# Technical data MagSpring ES30 11N-22N


MagSpring side		ES30- 100/-SL		ES30-300
А	165 mm	245 mm	325 mm	405 mm
В	130 mm	210 mm	290 mm	370 mm

32.25

MagSpring front				ES30-300
	165 mm	245 mm	325 mm	405 mm
	130 mm	210 mm	290 mm	370 mm

18.25

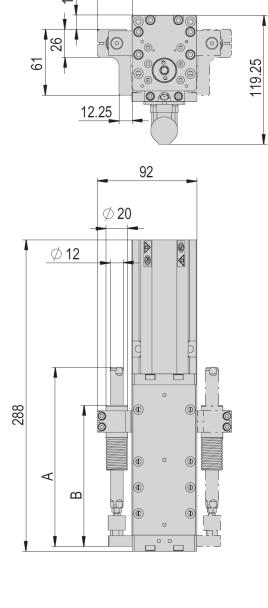

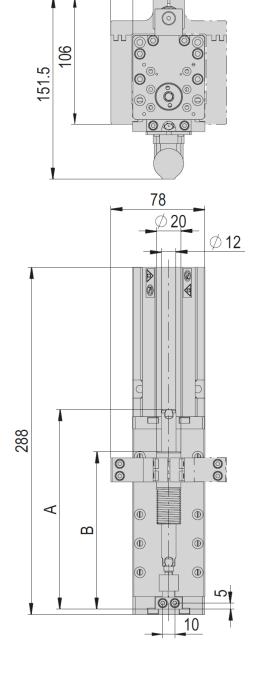



MagSpring ES30-50-SL					front			
Order number	50429205	50429206	50429207	50429211	50429212	50429213		
Stroke H	50 mm							
Net weight	0.243 kg	0.242 kg	0.2421.5	0.215 km	0.215 km	0.245		
Net weight	0.245 kg	0.243 kg	0.243 kg	0.315 kg	0.315 kg	0.315 kg		

MagSpring ES30-100/-SL							
Order number	50429218	50429219	50429220	50429224	50429225	50429226	
Stroke H	100 mm						
Net weight	0.428 kg	0.428 kg	0.428 kg	0.5 kg	0.5 kg	0.5 kg	
Permanent force	11 N	17 N	22 N	11 N	17 N	22 N	

MagSpring ES30-200/-SL		side			front		
Order number	50429231	50429232	50429233	50429237	50429238	50429239	
Stroke H	200 mm						
Net weight	0.598 kg	0.598 kg	0.598 kg	0.67 kg	0.67 kg	0.67 kg	
Permanent force	11 N	17 N	22 N	11 N	17 N	22 N	


MagSpring ES30-300	side			front		
Order number	50429244	50429245	50429246	50429250	50429251	50429252
Stroke H	290 mm					
Net weight	0.761 kg	0.761 kg	0.761 kg	0.833 kg	0.833 kg	0.833 kg
Permanent force	11 N	17 N	22 N	11 N	17 N	22 N





## Technical data MagSpring ES30 40N-60N


MagSpring side		ES30- 100/-SL		ES30-300
А	165 mm	245 mm	325 mm	405 mm
В	150 mm	225 mm	300 mm	375 mm

MagSpring side		ES30- 100/-SL		ES30-300
	165 mm	245 mm	325 mm	405 mm
	150 mm	225 mm	300 mm	375 mm

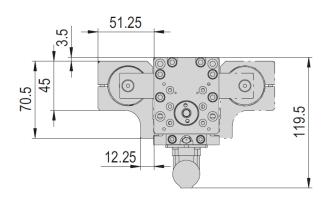

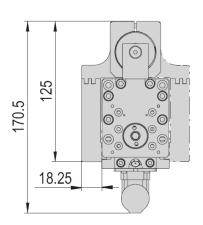

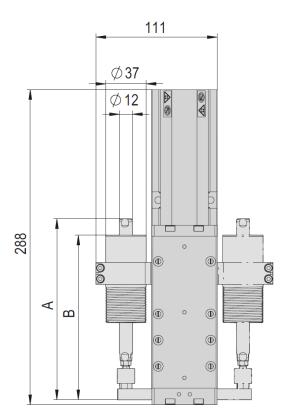

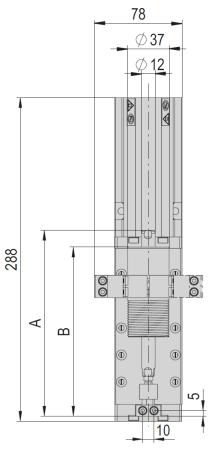



MagSpring ES30-50-SL						
Order number	50429208	50429209	50429210	50429214	50429215	50429216
Stroke H	50 mm					
Net weight	0.646 kg	0.646 kg	0.646 kg	0.718 kg	0.718 kg	0.718 kg
3						

MagSpring ES30-100/-SL		side			front	
Order number	50429221	50429222	50429223	50429227	50429228	50429229
Stroke H	100 mm					
Net weight	1.166 kg	1.166 kg	1.166 kg	1.238 kg	1.238 kg	1.238 kg
Permanent force	40 N	50 N	60 N	40 N	50 N	60 N

MagSpring ES30-200/-SL		side			front	
Order number	50429234	50429235	50429236	50429240	50429241	50429242
Stroke H	200 mm					
Net weight	1.671 kg	1.671 kg	1.671 kg	1.743 kg	1.743 kg	1.743 kg
Permanent force	40 N	50 N	60 N	40 N	50 N	60 N

MagSpring ES30-300						
Order number	50429247	50429248	50429249	50429253	50429254	50429255
Stroke H	275 mm					
Net weight	2.211 kg	2.211 kg	2.211 kg	2.283 kg	2.283 kg	2.283 kg
Permanent force	40 N	50 N	60 N	40 N	50 N	60 N



#### 5.3.2 Compensation spring

#### **Attachment compensation spring**

As a cost-efficient alternative to a MagSpring, a compensating spring (mechanical spring) can be used. This compensating spring may only be used with the ES20-50-SL with stroke length 50 mm and small mass.

Please note that the compensating spring has a non-constant force.



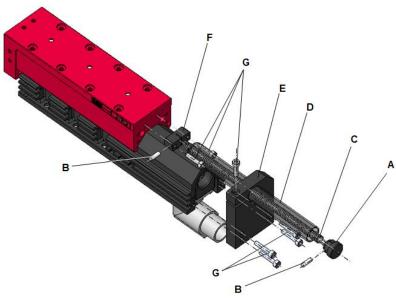


Fig. 8 Mounting of compensation spring

The compensating spring is supplied as a set and consists of the following components:

Pos.	Description
Α	Top clamp
В	Cylinder pin
С	Tension spring
D	Spring cover
E	Holder spring cover
F	Clamp at the bottom
G	Mounting parts

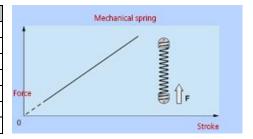

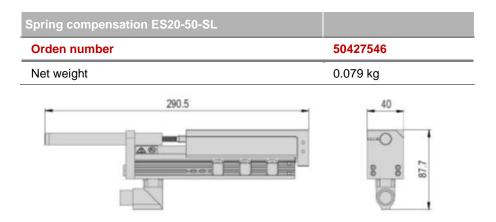



#### 5.3.3 External position measuring system for ES20 and ES30

The contactless position measuring system on a magnetic basis with integrated evaluation electronics is used everywhere, where you cannot safely reference the axes. In addition, a high positional accuracy and a high accuracy are achieved and quiet driving behaviour.


The system consists a sensor and a tape on which magnetic information are stored. Both components are fixed to the module.

With the internal measuring system of the motor, a repeatability of  $\pm$  0.05 mm and a deviation of the absolute accuracy between 0.1% and 0.4% (depending on the drive unit) is achieved. Is this not enough, we recommend an external measuring system.

#### Advantages:

- Referencing not necessary
- High repeatability and absolute accuracy
- Dynamic and quiet driving
- Minimize control noise

#### External position measuring system ES20

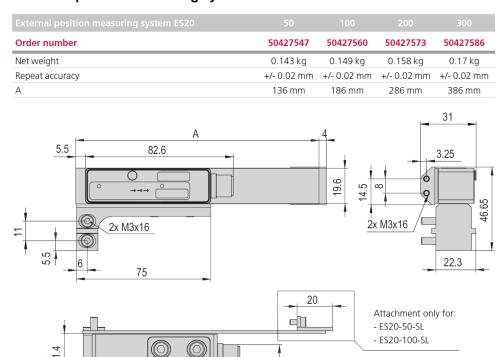


M12x1



## External position measuring system ES30



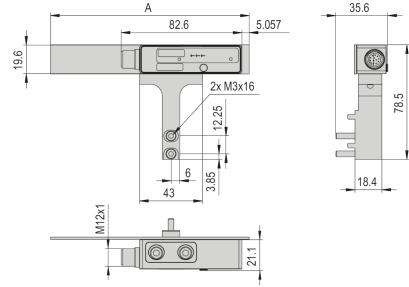

## Setting of the external position measuring system

Distance between sensor and belt

The sensor is installed parallel to the belt using a feeler gauge. The value can be found in the table below.

Sensor	Distance min.	Distance max.	Recommended distance [mm]
type	[mm]	[mm]	
1MSA501	0.2	1.3	0.5


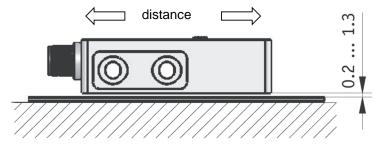


Fig. 9 External position measuring system (example illustration)



#### 5.3.4 Servo controller

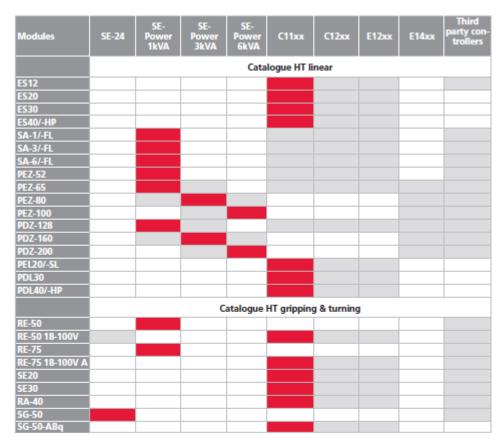

The servo controllers (except the third party controllers) are servo position controllers that are specifically tailored to all Afag modules and axes. They provide you, the user, with extremely short commissioning times and simple, practical handling. The effort required for system integration is reduced to a minimum because all modules and axes are parametrised ex works, and processed to ensure optimal operation.

Note: In order to be connected to third party controllers, all cables are also available with open ends. If you have any questions, please contact your sales partner.



Fig. 10 Overview of servo controllers





#### **Technical data servo controllers**

## **Controller C11xx**

C11xx	
Operating temperature	0 - 40 °C
Bearing temperature	-25 - 70 °C
Humidity	< 90 %

Туре	C1100 CanOpen STO	C1150 EtherCat STO	C1150 Profinet PN STO
Order number	50419402	50419403	50419404
Net weight	0.7 kg	0.7 kg	0.7 kg
Dimensions W x H x D	26.6x206x106 mm	26.6x206x106 mm	26.6x206x106 mm
Nominal output current	25 A	25 A	25 A
Supply voltage	24 - 72 VDC	24 - 72 VDC	24 - 72VDC
Control voltage	24 VDC	24 VDC	24 VDC
Protection type	IP 20	IP 20	IP 20
Intermediate circuit voltage	24 - 80 VDC	24 - 80 VDC	24 - 80 VDC
Programming interface	RS 232	RS 232	RS 232

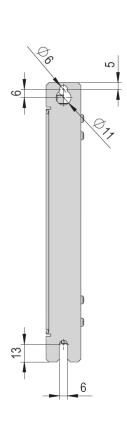

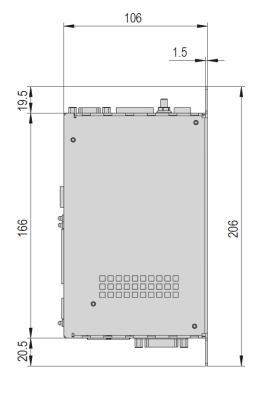



#### Inlcuded in the delivery

■ 1x Plug kit for C1xxx-1S

#### Accessories

- Power supply S01-72/500, 1-phase
- Motor plug for controller C1x00
- USB-RS232 Converter for controllers

## **Alternative Accessories**


Additional power supplies





#### **Controller C12xx**

C12xx	
Operating temperature	0 - 40 °C
Bearing temperature	-25 - 70 °C
Humidity	< 90 %

Туре	C1250 EtherCat STO	C1250 Profinet PN STO
Order number	50419400	50419401
Net weight	0.7 kg	0.7 kg
Dimensions W x H x D	25.3x216x106 mm	25.3x216x106 mm
Nominal output current	25 A	25 A
Supply voltage	24 - 72 VDC	24 - 72 VDC
Control voltage	24 VDC	24 VDC
Protection type	IP 20	IP 20
Intermediate circuit voltage	24 - 80 VDC	24 - 80 VDC
Programming interface	RS 232	RS 232

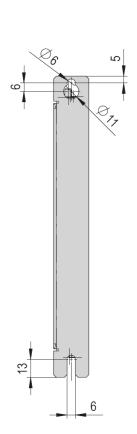

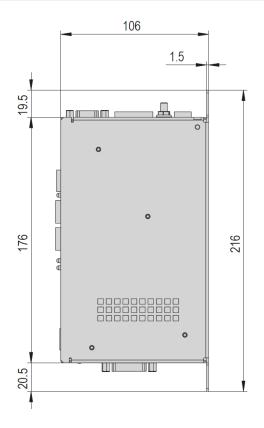



#### Inlcuded in the delivery

■ 1x Plug kit for C1xxx-1S

#### **Accessories**

- Power supply S01-72/500, 1-phase
- Motor plug for controller C1x00
- USB-RS232 Converter for controllers

#### **Alternative Accessories**


Additional power supplies



#### **Controller E12xx**

E12xx	
Operating temperature	0 - 40 °C
Bearing temperature	-25 - 40 °C
Humidity	< 90 %

Туре	E1250 Powerlink PL-UC	E1250 Ethernet IP-UC	E1250 Ethercat SoE SE-UC	E1250 Sercos III SC-UC
Order number	50465787	50465792	50465793	50465794
Net weight	1 kg	1 kg	1 kg	1 kg
Dimensions W x H x D	40x270x180 mm	40x270x180 mm	40x270x180 mm	40x270x180 mm
Nominal output current	32 A	32 A	32 A	32 A
Supply voltage	24 - 72 VDC	24 - 72 VDC	24 - 72 VDC	24 - 72 VDC
Control voltage	24 VDC	24 VDC	24 VDC	24 VDC
Protection type	IP 20	IP 20	IP 20	IP 20
Intermediate circuit voltage	max. 91 VDC	max. 91 VDC	max. 91 VDC	max. 91 VDC
Programming interface	RS 232 + Ethernet	RS 232 + Ethernet	RS 232 + Ethernet	RS 232 + Ethernet

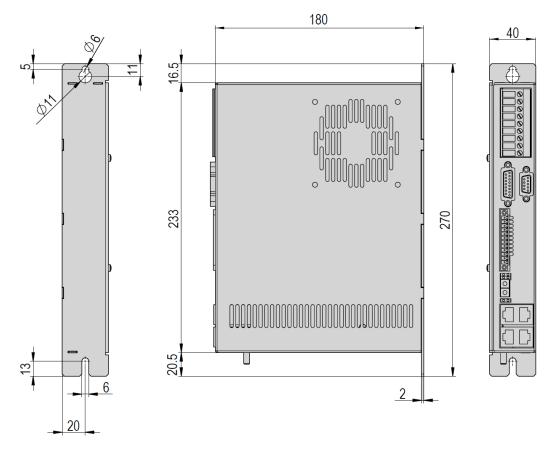

## Accessories


- Power supply S01-72/500, 1-phase
- USB-RS232 Converter for controllers

#### **Alternative Accessories**

Additional power supplies




#### 5.3.5 Controllers, cables, plugs

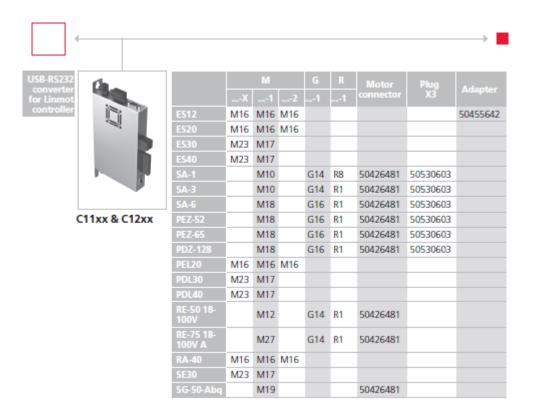



The C11xx and C12xx controllers are supplied with a plug set.



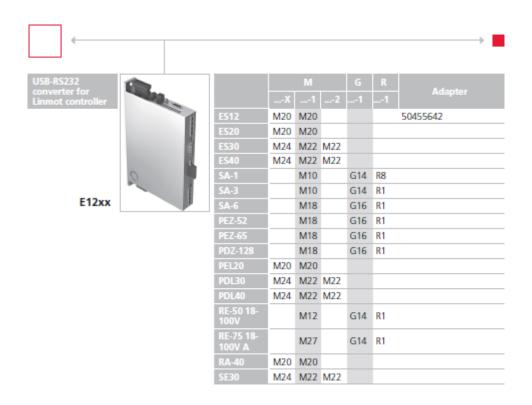

## Accessories C1xxx


Motor plug for controller C1xxx	
Order number	50426481
Net weight	0.01 kg
Plug kit for controller C1xxx-1S	
Order number	50426471
Net weight	0.02 kg
USB-RS232 Converter for controllers	
Order number	50426494
Net weight	0.07 kg
Plug X3 for controller C1xxx	
Order number	50530603
Net weight	0.02 kg



## Cable types


#### Motor cable M16-0-1-1

Motor cable M16-0-1-1			8m-0-1-1
Order number	50437168	50437167	50427023
Net weight	0.6 kg	0.9 kg	1.2 kg
Cable Ø	9.5 mm	9.5 mm	9.5 mm
Min. bending radii	60 mm	60 mm	60 mm
Material	PUR	PUR	PUR
A	4 m	6 m	8 m




## Motor cable extension to M16-0-0-1/2

Motor cable extension for M16-0-0-1/2				2m-0-0-2
Order number	50450944	50427026	50463082	50463081
Net weight	0.3 kg	0.6 kg	0.9 kg	0.2 kg
Cable Ø	9.5 mm	9.5 mm	9.5 mm	9.7 mm
Min. bending radii	60 mm	60 mm	60 mm	60 mm
Material	PUR	PUR	PUR	PUR
A	2 m	4 m	6 m	2 m



## Motor cable M17-0-1-1


Motor cable-M17-0-1-1			8m-0-1-1
Order number	50437170	50437169	50427021
Net weight	0.6 kg	0.8 kg	1.1 kg
Cable Ø	10.8 mm	10.8 mm	10.8 mm
Min. bending radii	100 mm	100 mm	100 mm
Material	PUR	PUR	PUR
A	4 m	6 m	8 m







#### Motor cable extension to M17-0-0-1/-2

Motor cable extension for M17-0-0-1/2					4m-0-0-2
Order number	50463084	50427024	50463087	50463085	50463086
Net weight	0.4 kg	0.8 kg	1.2 kg	0.4 kg	0.8 kg
Cable Ø	10.8 mm	10.8 mm	10.8 mm	10.9 mm	10.9 mm
Min. bending radii	100 mm				
Material	PUR	PUR	PUR	PUR	PUR
A	2 m	4 m	6 m	2 m	4 m






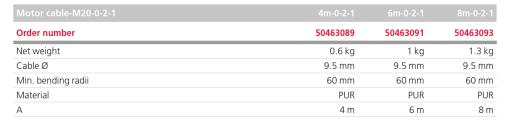



#### Motor cable-M22-0-2-1

Motor cable-M22-0-2-1	4m-0-2-1	6m-0-2-1	8m-0-2-1
Order number	50463100	50463101	50463103
Net weight	0.7 kg	1.1 kg	1.4 kg
Cable Ø	10.8 mm	10.8 mm	10.8 mm
Min. bending radii	100 mm	100 mm	100 mm
Material	PUR	PUR	PUR
A	4 m	6 m	8 m






## 5.3.6 Transformers and power supplies


Nominal output current

External fuse

## Power supply S01-72/500, 1 phase

Power supply S01-72/500, 1 phase	
Operating temperature	-25 - 70 °C
Туре	Power supply S01-72/500, 1-phase
Order number	50439465
Net weight	1 kg
Net weight Protection rating	1 kg IP 20
	3
Protection rating Output power	IP 20
Protection rating	IP 20 480 W

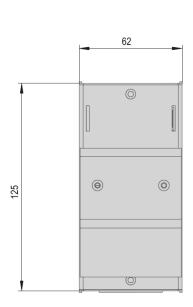

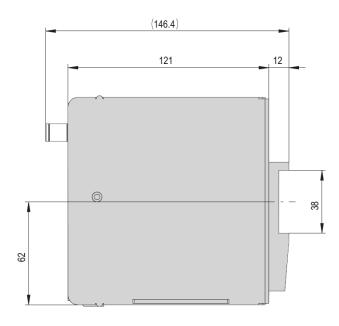


6 A (C, D, K Typ)




## Power supply S01-72/1000, 3 phases


Power supply S01-72/1000, 3 phase	
Operating temperature	-25 - 70 °C
Туре	Power supply S01-72/1000, 3-phase
Order number	50439466
Net weight	2 kg
Protection rating	IP 20
Output power	960 W
Primar voltage	3x 340 - 550 VAC, 50/60 Hz
Secondary voltage	54 - 80 VDC adjustable
Nominal output current	27 A
External fuse	16-32 A (C, D, K Typ)

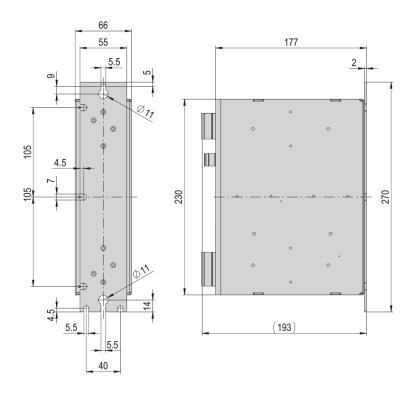



## 5.3.7 Program for supports - ES-Modules

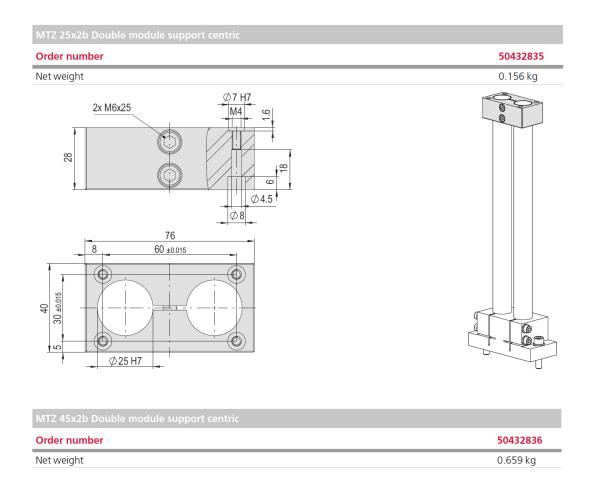

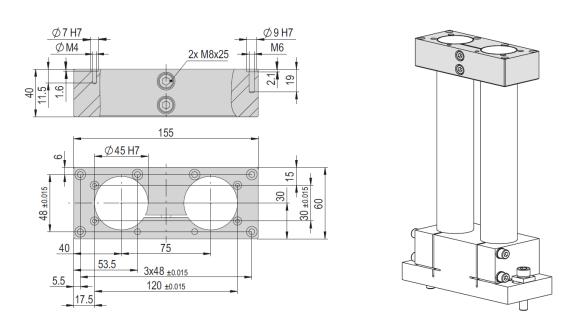



## 6 Installation, assembly & setting



The customer is responsible for the installation of the electric slides into the automation system!

## 6.1 Safety Instructions for installation & assembly

The electric slide is an incomplete machine.

For safe operation, the electric slides must be integrated into the safety concept of the automation system in which they are installed.

During normal operation it must be ensured that the user cannot interfere with the working area of the electric slide.



When installing an electric slide in an assembly system, the system operator must provide the system with a protective device with a locked door safety circuit!

## **CAUTION**



#### Danger of injury from attachments!

The electric slide is electrically controlled. Attachments can restrict the free movement of the electric slide and cause injuries such as crushing.

- Make sure that the movement of the is not restricted by mounted attachments.
- Take appropriate measures to ensure safe operation!



No liability can be assumed for damages caused by improper installation/assembling work carried out by the operator.



Also observe the safety instructions in  $\bigcirc$  chap. 2 "Safety instructions" in this manual.



#### 6.2 Assembly & attachment

The electric slides (up to sizes ES30-400 and ES30-500) can be installed horizontally or vertically.


For vertical installation, a MagSpring must be used to provide weight compensation, which secures the electric slide in de-energized status before it is extended.



The ES30-400 and ES30-500 electric slides may only be mounted in a horizontal position as there is no load compensation for vertical installation.

#### 6.2.1 Mounting holes

The mounting holes (M4 for ES20) and (M6 for ES30) are located on the base element and on the slide.

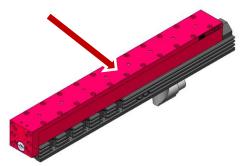

Module		
ES20	M4	Hole pitch 30x30 mm
ES30	M6	Hole pitch 48x48 mm

Fig. 11 Mounting holes on the slide



Modul		
ES20	Ø 4.1	Hole pitch 30x30 mm
ES30	Ø 6.3	Hole pitch 48x48 mm

Fig. 12 Mounting holes on the base element



For mounting use the centering sleeves ( chapter 6.2.2) included in the scope of delivery.




## 6.2.2 Centering bushing

Use the centring sleeves supplied for positioning. Insert the centering sleeves in two diagonally opposed holes of the installation grid.

ES20	Base element	Slide
Hole grid	30 x 30 mm	30 x 30 mm
Bore hole and fastening thread	Ø 4.1 mm	M4
Centr. sleeves (H7) 11016850	Ø 7 mm	Ø 7 mm

ES30	Base element	Slide
Hole grid	48 x 48 mm	48 x 48 mm
Bore hole and fastening thread	Ø 6.3 mm	M6
Centr. sleeves (H7) 11004942	Ø 9 mm	Ø 9 mm


Centering bushings	Ø4x2	Ø5x2.5				Ø12x4.8	
Order number	50332257	50035831	11016850	50263565	11004942	50187424	50189497
Net weight	0.001 kg	0.002 kg	0.006 kg				
А	4 mm	5 mm	7 mm	8 mm	9 mm	12 mm	19 mm
В	2 mm	2.5 mm	3 mm	3.5 mm	4 mm	4.8 mm	5.8 mm
С	2.6 mm	3.2 mm	4.3 mm	5.4 mm	6.5 mm	8.5 mm	13 mm

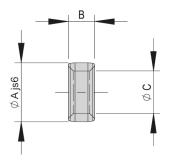

Attachment grid	16x16 mm	20x20 mm	30x30 mm				75x75 mm	96x96 mm
А	16 mm	20 mm	30 mm	38 mm	48 mm	60 mm	75 mm	96 mm
В	8 mm	10 mm	15 mm	19 mm	24 mm	30 mm	75 mm	48 mm
C	4x1.1 mm	5x1.3 mm	7x1.6 mm	8x1.8 mm	9x2.1 mm	12x2.5 mm	15x2.7 mm	19x3 mm
D	M2.5	M3	M4	M5	M6	M8	M10	M12

#### Module-centering, centering bushings

In order to guarantee a high and repetitive fit accuracy during installation, operation or replacement of a module, all components of the entire program are consequently provided with a precise module centering. Centering bushings or pins are supplied as standard with each module.

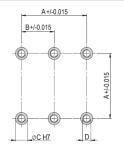




#### 6.2.3 Tightening torques

For assembling use screws with the following minimum specifications:

Standard	VDI 2230	
Screw strength	Category 8.8	
Surface:	Galvanized blue, oiled or greased	

Thread	Tightening torque
M3	1.1 1.4 Nm
M4	2.6 3.3 Nm
M5	5.2 6.5 Nm
M6	9.0 11.3 Nm
M8	21.6 27.3 Nm

#### 6.2.4 Mounting ES20 (slide)

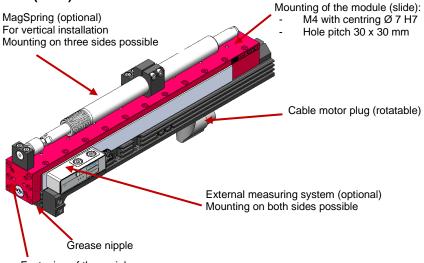

Fastening of the periphery:

- 6x M4 with centring Ø 7 H7 hole pitch 30 x 30 mm
- 4x M3 with centring Ø 5 H7 hole pitch 20 x 20 mm

## Fig. 13 Electric slide ES (mounting of the slide)

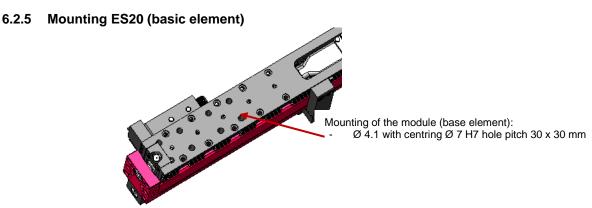


Fig. 14 Electric slide ES 20 (mounting basic element)




## **NOTICE**

#### Magnetic tape with information!

The magnetic tape of the external measuring system contains information.

Keep sufficient distance from other magnetic sources.

#### Mounting ES30 (slide) 6.2.6

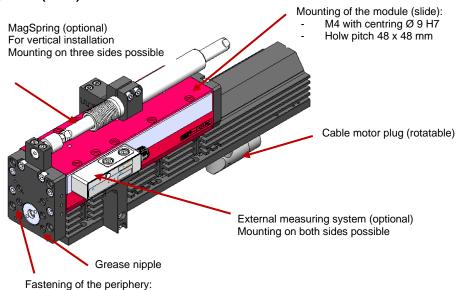

- 4x M6 with centring Ø 9 H7 hole pitch 48 x 48 mm
- 6x M4 with centring Ø 7 H7 hole pitch 30 x 30 mm

Fig. 15 Electric slide ES 30 (mounting of the slide)

#### Mounting ES30 (basic element) 6.2.7

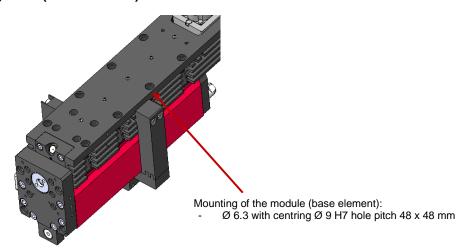


Fig. 16 Electric slide ES 30 (mounting basic element)

## **NOTICE**

#### Magnetic tape with information!

The magnetic tape of the external measuring system contains information.

Keep sufficient distance from other magnetic sources.



#### 6.2.8 Rotatability of C motor connector (ES30)

If C-motor connector are provided for the ES30 modules, the C-connector can be rotated in both directions (see Fig. 17). In this case, the maximum rotatability of the C-connector must be observed.

## **NOTICE**

#### Risk of damage to the motor!

Do not overtighten the motor connector beyond the intended position, as this will damage the motor.

• If it is necessary to adjust the connector, always observe the maximum permissible rotatability (see Fig. 17).

#### **C-Connector**

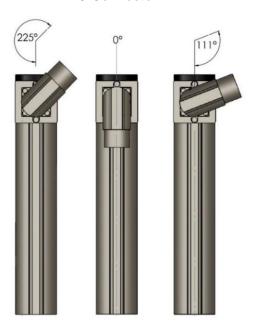


Fig. 17 Setting the C-motor connector (ES30 modules)



Our service technicians will be happy to answer any further questions you may have about setting the C-motor plugs.



#### 6.3 Programming of the electric slides

#### 6.3.1 Safety instructions for programming

# M

## **WARNING**

## Risk of injury due to flying parts ejected from the module!

If the control unit is incorrectly programmed, the electric slides can move to the stop position unbraked and injure persons by ejected parts.

- Programming should only be carried out by qualified personnel.
- Observe the operating instructions of the control system used!

## **CAUTION**



#### Risk of injuries due to uncontrolled parts movements!

If the position sensor fails or a limit switch cable is defective, unexpected movements of the electric slides may occur and cause injuries.

Replace the defective position sensor or limit switch cable immediately.

#### 6.3.2 Programming



The programming differs depending on the control system used.

Observe the respective manuals of the control system manufacturer!



## 7 Commissioning

After connection, the electric slides are put into operation for the first time via the control.

#### 7.1 Safety instructions for commissioning

## **WARNING**

#### Risk of injury from incorrect programming!



Incorrect programming can cause uncontrolled movements of the ES, resulting in serious injury or death and material damage.

- Commissioning must only be carried out in setup mode or jog mode.
- Before working on the electric slide, make sure that the control unit is switched off and that it cannot be switched on again unintentionally.

## **CAUTION**

#### Danger of injury in the working area of the electric slides!



Due to the decentralised control system, the operator of the electric slide must not necessarily stand next to the rotary modules during operation so that he may not have a complete view of the working area. Persons within the working area may be injured.

- When operating the electric slides, ensure a good overview of the entire working area.
- Unauthorized persons must not stay within the working area during operation.

#### **CAUTION**

#### Risk of injuries due to uncontrolled parts movements!



When the control unit is switched on, signals from the control unit can lead to unintentional movements of the electric slides and cause serious injuries or material damage.

- When working on the electric slides, make sure that the control unit is switched off and that it cannot be switched on again unintentionally.
- Only connect or disconnect the cables when the control unit is switched off.
- Observe the operating instructions of the controller used!



Observe the safety instructions in  $\bigcirc$  chapter 2 "Safety instructions" of these mounting instructions!



#### 7.2 Preparatory activities for commissioning

The electric slide is designed for operation with LinMot servo controllers.

The operation of the servo controllers is described in the operating manual of the respective servo controller.

To prepare commissioning proceed as follows:

- Connect the electric slide with the motor cable M16 and an adapter cable to the servo controller.
- 2. For test operation:
  - Connect the servo controller to a computer on which the operating software is installed (refer to perating instructions of the operating software).



If the electric slide is delivered with a LinMot servo controller, the operating parameters are already stored in the controller.

The electric slide can be operated immediately.

## **CAUTION**

#### Danger due to missing safety devices!



Operating the electric slide without appropriate protective devices can lead to considerable material damage and injuries.

- The user must provide protective hoods, safety doors or other appropriate safety measures for operation!
- These safety devices must comply with the usual safety guidelines and safety standards and prevent people from being in the working area of the electric slide in an appropriate manner.
- The electric slides may only be put into operation with closed and functioning safety devices!

#### 7.3 Commissioning of the modules

Proceed carefully and follow the instructions step by step when commissioning the modules for the first time:

- 1. Observe the permissible technical values (\$\circ\$ Chapter 3).
  - Payload
  - Movement frequency
  - Momentary load
- 2. Make sure that there are no persons or tools in the working area.
- 3. Connect the cable to the electric slide and the system control.
- 4. Perform test run:
  - Start with slow movements
  - Then continue under normal operating conditions
  - ⇒ Commissioning is completed.



#### Setting the speeds on the electric axes

The speeds of the electric axes are usually specified by the higher-level control system.

A variety of example programs are available for a large number of common control systems. This allows the target speed, the acceleration and the target position to be specified.

## **NOTICE**

#### Material damage due to excessive speeds or acceleration!

Excessively high speeds or acceleration can cause damage to the electric slide or the periphery.

Observe the operating instructions of the control unit used!

## 7.4 Setting up & retrofitting



Before carrying out any setting work at the electric slide, deactivate the controller enable. Activate the controller enable only after the work has been completed!

## **CAUTION**



#### Risk of injury due to incorrect operation of the system!

Incorrect operation during setup work on the machine can lead to unintentional starting of the electric slide and cause injuries.

- Setting up and retrofitting work work may only be carried out by qualified personnel.
- Observe the operating instructions!

## **CAUTION**



#### Danger of injury from attachments!

The electric slide is electrically controlled. Attachments can restrict the free movement of the electric slide and lead to injuries.

- Ensure that the movement of the electric slide is not restricted by mounted attachments.
- Take appropriate measures to ensure safe operation!



#### 8 Fault elimination

#### 8.1 Safety instructions for troubleshooting

## **WARNING**



#### Danger of injury due to faulty troubleshooting!

Poorly performed troubleshooting work can lead to serious injuries and damage to property.

- Only use trained specialist personnel for troubleshooting.
- All work on the electric slides must be carried out with the power supply cut off!

## **NOTICE**

#### Risk of material damage due to unexpected movements!

There is a risk of material damage if unusual movement of the electric slides (e.g. hard shocks) is detected during normal operation.

Stop the system immediately and eliminate the cause!



Also observe the safety instructions in  $\bigcirc$  chapter 2 "Safety instructions" in this manual.

## 8.2 Fault causes and remedy

The following table contains an overview of possible fault causes and how to proceed to eliminate them.

Fault	Possible cause	Remedy:
Slide does not move	<ul> <li>Payload too high</li> <li>Slide blocked by foreign matter</li> <li>Module defect</li> <li>Module incorrectly connected</li> </ul>	<ul> <li>Reduce payload</li> <li>Remove foreign matter</li> <li>Send module to Afag for overhaul</li> <li>Check connections and connect module correctly</li> </ul>
Slide does not approach end position correctly	<ul><li>Incorrect control</li></ul>	<ul> <li>Check and correct control</li> </ul>
Abnormal noises or rough running	<ul><li>Soiling of the module</li><li>Tensions</li><li>insufficient lubrication</li></ul>	<ul> <li>Cleaning the module</li> <li>Install the module without tension</li> <li>Lubricating the module</li> </ul>



## 9 Maintenance and repair

#### 9.1 General notes

The electric slides are almost maintenance-free. Nevertheless, some maintenance work must be carried out to ensure an optimum operating condition of the electric slides.

## 9.2 Safety instructions for maintenance and repair

## **WARNING**

#### Danger of injury due to improper maintenance!



Improperly carried out maintenance activities can cause considerable damage to property and serious injury.

- Only use qualified personnel to carry out the activities.
- Always wear personal protective equipment when carrying out maintenance and repair work!

#### **WARNING**

## Risk of injuries due to uncontrolled parts movements!



Signals from the control system can trigger unintentional movements of the electric slides and cause injury.

- Before starting any work on the electric slides, switch off the control unit and make sure that it cannot be switched on again unintentionally. Observe the operating instructions of the controller used!
- Before starting any activities, switch off the media supply and make sure it cannot be switched on again unintentionally!



Also observe the safety instructions in  $\bigcirc$  chapter 2 "Safety instructions" in this manual.



#### 9.3 Maintenance activities and maintenance intervals



- Observe the specified maintenance and care intervals. The intervals refer to normal operating conditions.
- If the electric slides are to be operated in an environment with abrasive dusts or corrosive or aggressive vapours, gases or liquids, the approval of Afag Automation AG must be obtained in advance.

## 9.3.1 Overview of the maintenance points

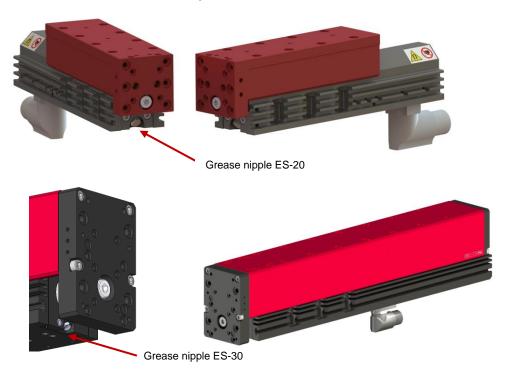


Fig. 18 Electric slide



No.	Maintenance point	Maintenance work	Interval	System [On/Off]	Remarks	
1	Fasteners	Checking	After commissioning	[Off]	-	
			Check screws f	or tight fit		
2	Guideways	Cleaning	After commissioning	[Off]	-	
			Clean guides with a slightly oily cloth			
		■ Check settir		of the guideways		
3	Linear motor axes with wiper	Cleaning and lubricating	every 3 months	[Off]	Recommended lubricant: Klübersynth UH1 14-31	
			Clean the rotor			
			■ Lubricate linear motor axes with a grease gun via the grease nipple (Fig. 18) on the axis. Recommended lubricant: Klübersynth UH1 14-31. If other lubricants are used, see 'Minimum requirements for lubricant' below.			
		<ul> <li>Minimum requirements for lubricant:</li> <li>Lithium soap grease KP2-K (DIN-Nr.: 5<sup>-1</sup></li> <li>Lubric. oil CLP32-100 (DIN-Nr.: 51517,</li> </ul>			K (DIN-Nr.: 51502 or 51825	



#### 9.3.2 Further maintenance

Further maintenance is not required, if the ambient conditions listed below are complied with:

- Clean working area
- No use of splash water
- No abrasive or process dust and vapours
- Ambient conditions as specified in the technical data

#### 9.4 Spare parts and repair work

AFAG Automation AG offers a reliable repair service. Defective electric slides can be sent to AFAG for repair within the warranty period.

After expiry of the warranty period, the customer may replace or repair defective modules or wear parts himself or send them to the AFAG repair service.



Please note that AFAG does not provide any warranty for modules that have not been replaced or repaired by AFAG!

## CAUTION

Risk of injury when removing the electric slides from uncontrolled movements!



When dismounting the electric slides from the machine, there is a danger of uncontrolled movements.

- Disconnect the media supply (electrics) before removing the grippers!
- Disassembling should only be carried out by qualified personnel!
- Only remove the electric slides when the control system is switched off and secured!



## 10 Decommissioning and disposal

The electric slides must be properly dismounted after use and disposed of in an environmentally friendly manner.

#### 10.1 Safety instructions for decommissioning and disposal

#### **WARNING**

#### Risk of injury from improper decommissioning and disposal!



Improperly carried out activities can result in considerable material damage and serious injury.

- Use only qualified personnel to carry out the activities.
- Disconnect the media supply (electrics) before removing the grippers!
- Only remove the electric slides when the control system is switched off and secured!

#### 10.2 Decommissioning

If the electric slides are not used for a longer period of time, they must be properly decommissioned and stored as described in  $\bigcirc$  chapter 4.5.

#### 10.3 Disposal

The electric slides must be disposed of properly at the end of their service life and the raw materials used must be recycled. Observe the legal regulations and company requirements.

The electric slides must not be disposed of as a complete unit. Dismantle the electric slides and separate the various components according to type of material and dispose of properly:

- Scrap the metallic materials.
- Hand over plastic parts for recycling.
- Sort the rest of the components by their material properties and dispose of them accordingly.

## **NOTICE**

#### Risk to the environment from incorrect disposal of the electric slides.

Environmental damage can be caused by improper disposal of the electric slides.

- Electronic parts, electrical scrap, auxiliary and operating materials must be disposed of by approved specialist companies.
- Information on proper disposal can be obtained from the responsible local authorities.



## 11 Declaration of incorporation

# **Declaration of incorporation**

for partly completed machinery according to the Machinery Directive 2006/42/EC, Annex II, 1.B

The manufacturer hereby declares:

Afag Automation AG, Luzernstrasse 32, CH-6144 Zell

that the partly completed machine:

Product description	Electric slide ES
Type:	ES20-050-SL, ES20-100-SL, ES20-200, ES20-300, ES30-050-SL, ES30-100-SL, ES30-100, ES30-200-SL, ES30-200, ES30-300, ES30-400, ES30-500

complies with the following essential health and safety requirements of the Machinery Directive 2006/42/EC at the time of declaration: 1.1; 1.1.1; 1.1.2; 1.1.3, 1.1.5, 1.3.2, 1.3.4 and 1.5.1

Harmonised standards applied, in particular:			
2014/30/EU	Electromagnetic Compatibility Directive (EMC)		
2014/35/EU	Low Voltage Directive (LVD)		
EN ISO 12100:2010	Safety of machinery - General design principles - Risk assessment and risk reduction.		
DIN EN 60204-1:2018	Safety of machinery - Electrical equipment of machines - Part 1: General requirements		

Note:

The partly completed machinery must not be put into service until the machinery into which it is to be incorporated has been declared in conformity with the provisions of Machinery Directive 2006/42/EC.

The manufacturer undertakes to transmit, in response to a reasoned request by the national authorities, relevant technical documentation for the partly completed machinery.

The relevant technical documentation was created according to Annex VII, Part B of the above-mentioned Directive.

#### Authorised representative for compiling the technical documentation:

Niklaus Röthlisberger, Product Manager, Afag Automation AG, CH-6144 Zell

Zell, 31.05.2023

Adrian Fuchser

Klaus Bott

CEO Afag Gruppe

CTO Afag Gruppe



Afag Automation AG Luzernstrasse 32

6144 Zell

Switzerland

T +41 62 959 86 86

sales@afag.com

Afag GmbH

Wernher-von-Braun-Straße 1

92224 Amberg

Germany

T +49 9621 650 27-0

sales@afag.com

Afag Engineering GmbH

Gewerbestraße 11

78739 Hardt

Germany

T +49 7422 560 03-0

sales@afag.com

Afag Automation Americas

Schaeff Machinery & Services LLC.

883 Seven Oaks Blvd, Suite 800

Smyrna, TN 37167

USA

T +1 615 730 7515

nashville@afag.com

Afag Automation APAC

Afag Automation Technology (Shanghai) Co., Ltd.

Room 102, 1/F, Bldg. 56, City Of Elite

No.1000, Jinhai Road, Pudong New District

Shanghai, 201206

China

T +86 021 5895 8065

shanghai@afag.com